 


SYSTEM 9

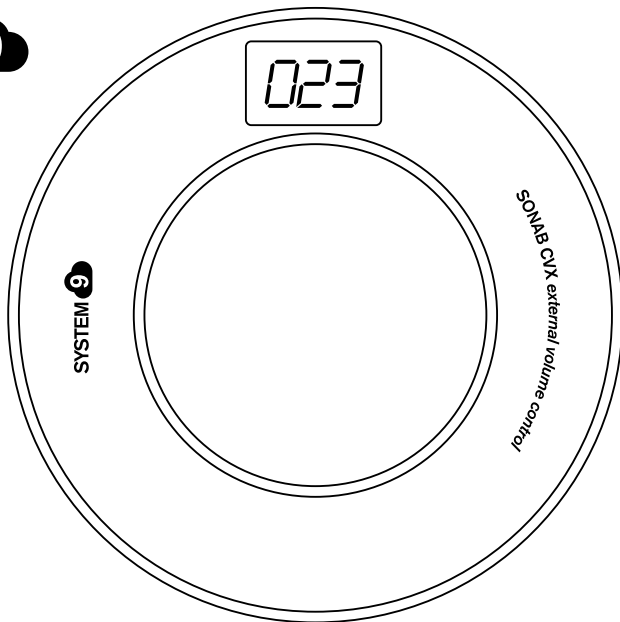

CVX external volume control

User manual • Bruksanvisning • Manuel d'utilisation • Bedienungsanleitung • Manual del propietario

.....

SPECIFICATIONS

Type: External volume control unit

Dimensions:

Diameter: 115 mm

Height: 63 mm

FEATURES

Connect to CVM or CGV

10 m cable for easy placement

Easy wallmounting

Flippable display

SONAB[®]
Sound & Society

© Sonab Audio AB Sverige
Sonab[®], Sonab logotypen, är registrerade varumärken av Sonab Audio AB, Sverige. System 9TM. Alla rättigheter reserverade.
Sonab följer en policy om ständig produktutveckling. Specifikationer kan ändras utan föregående meddelande.

© Sonab Audio AB Sweden
Sonab[®], the Sonab logotype are all registered trademarks of Sonab Audio AB, Sweden. System 9TM. All rights reserved.
Sonab follows a policy of continuous advancement in development. Specifications may be changed without notice.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



WARNING
Risk of electric shock
Do not open

AVIS
Risque de choc électrique
Ne pas ouvrir



WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

.....

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

13. Damage Requiring Service

Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or plug is damaged,
- B. If liquid has been spilled, or objects have fallen into the apparatus,
- C. If the apparatus has been exposed to rain or water,
- D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation,
- E. If the apparatus has been dropped or damaged in any way, and
- F. When the apparatus exhibits a distinct change in performance this indicates a need for service.

14. Object and Liquid Entry

 
Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on top of the apparatus. Don't put candles or other burning objects on top of this unit.

15. Batteries

Always consider the environmental issues and follow local regulations when disposing of batteries.

16. The power supply and power cord for this apparatus is intended for indoor use only.

ENGLISH

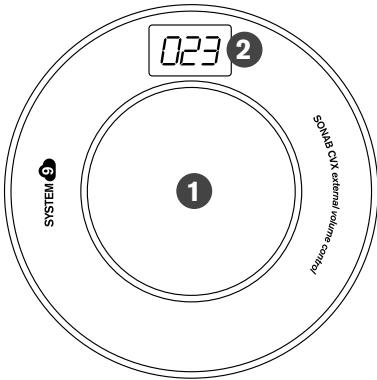

OVERVIEW

TOP

1. Volume control

Turn clockwise for higher volume and counterclockwise for lower volume.

 
2. Display

Shows the main volume (0–31) (CVX controls the main volume on CVM or CGV volume units.)

SIDE

3. Connection


Connect the cable provided to the CVX or CGV volume unit.

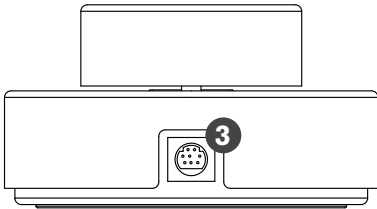

BOTTOM

4. Change how the display is shown

 Depending on how the CVX is positioned, the display can be changed. Switch the button to 0 or 180 degrees.

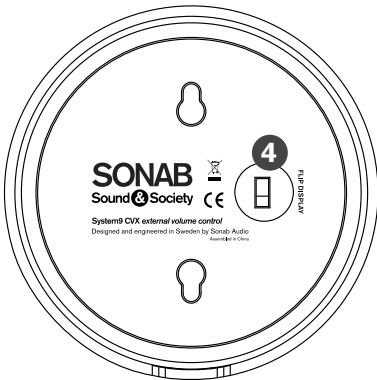

INSTALLATION

1. Place the CVX so that it is accessible.
2. The CVX can be hung on a wall or placed on a table.
3. The display can be turned 180 degrees for selective placement.

DURING INSTALLATION, ALWAYS OBSERVE NATIONAL ELECTRICAL SAFETY REGULATIONS AND RULES IN CASE OF ACCIDENTS.